

# YAMAHA RD350, RD350A,RD350B (USA)

SWITCH/SOCKET COLOR KEY			
B	BLACK	O	ORANGE
BR	BROWN	P	PINK
CH	CHOCOLATE	R	RED
DG	DARK GREEN	SB	SKY BLUE
G	GREEN	W	WHITE
GY	GREY	Y	YELLOW
L	BLUE		

2 COLOR WIRES ARE LABELLED X/Y WHERE  
X = WIRE COLOR AND Y = STRIPE COLOR

